BV12.3A
Freezer

Instruction manual

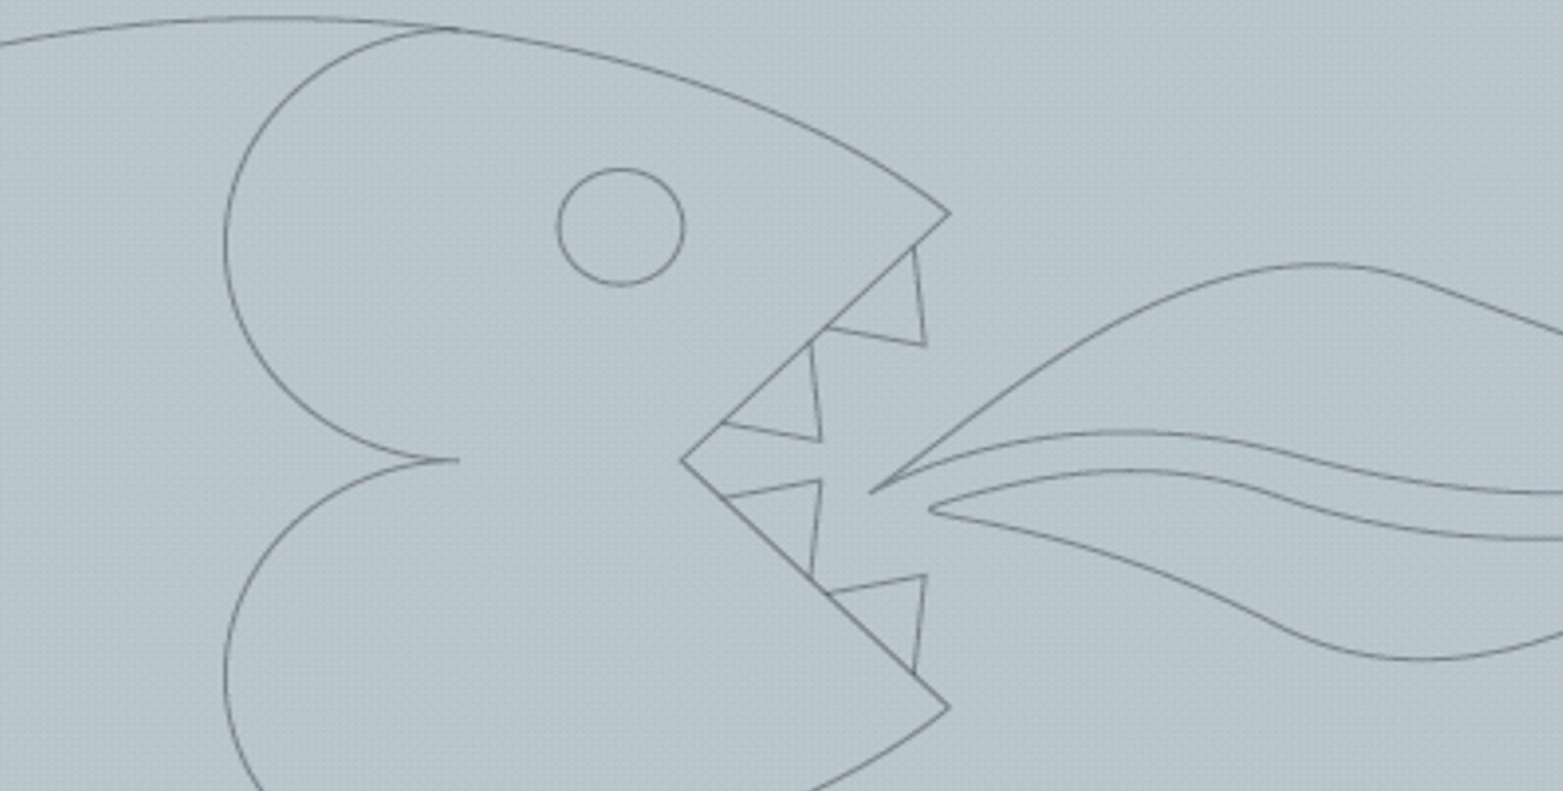

Baumatic®

Downloaded from Fridge-Manual.com Manuals

USER MANUAL FOR YOUR BAUMATIC

BV12.3A freezer

Baumatic®

You will be mine

NOTE: ***This User Instruction Manual contains important information, including safety & installation points, which will enable you to get the most out of your appliance. Please keep it in a safe place so that it is easily available for future reference. for you or any person not familiar with the operation of the appliance.***

DD 18/10/06

Downloaded from Fridge-Manual.com Manuals

Contents

Environmental note	4
Important safety information	5 – 6
Specifications of your freezer	7
Description of the appliance	8
Using your Baumatic freezer	9
Before switching on	9
During first use	9
Turning on the appliance and setting the thermostat	10
Control Panel	11
The ✱* freezer compartment**	11
Freezing fresh food	12
Tips on freezing	12-13
Making ice cubes	13
Freezing with Super Freeze	13
Cleaning and maintenance	14
Defrosting the ✱*** freezer compartment	15-16
Installation	17
Electrical connection	17
Positioning	18
Ventilation requirements	18
Aperture and appliance dimensions	19
Supplied installation components	19
Installing your freezer	20-22
Reversing the door of your appliance	23
Troubleshooting	24
Baumatic Ltd. Conditions of guarantee	25
Contact details	26

Downloaded from Fridge-Manual.com Manuals

Environmental note

Note: Before discarding an old appliance, switch off and disconnect it from the power supply. Cut off and render any plug useless. Cut the cable off directly behind the appliance to prevent misuse. This should be undertaken by a competent person. Disable the door lock to make sure that children cannot get stuck inside the appliance.

This appliance is marked according to the European directive 2002/96/EC on Waste electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The symbol **on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.**

Disposal must be carried out in accordance with local environmental regulations for waste disposal.
For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Downloaded from Fridge-Manual.com Manuals

Important safety information

Your safety is of the utmost importance to Baumatic. Please make sure that you read this instruction booklet **before** attempting to install or use the appliance. If you are unsure of any of the information contained in this booklet, please contact the Baumatic Technical Department.

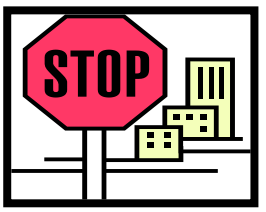

IMPORTANT: Any installation work must be carried out by a qualified electrician or competent person.

Use of the appliance

- Your appliance is only designed to be used in the home. It is suitable for freezing and storing frozen food. If it is used for any other purpose or it is not used correctly, then Baumatic Ltd. Will accept no liability for any damage that may be caused.
- Altering the specification of the appliance must not be attempted for reasons of safety.

Before using your appliance

- Check the appliance for any signs of transport damage. If you notice any damage, then you should not connect your appliance to your mains supply and should contact your retailer.

Refrigerant

- Your appliance contains R600a refrigerant, which is a natural gas that does not contain CFCs that can damage the environment. However it is a flammable substance, therefore care should be taken:
  - During the transportation and installation of the appliance, make sure that the refrigeration pipework does not get damaged.
  - If it does become damaged then sources of ignition and open flames should be avoided. Also the room that the appliance is situated in should be thoroughly ventilated.
- Do not place any objects on top of the appliance, as this may damage the table top.

Downloaded from Fridge-Manual.com Manuals

Child safety

- Packaging material should be kept away from children.
- Children should not be allowed to touch the controls or play with the appliance.

General safety

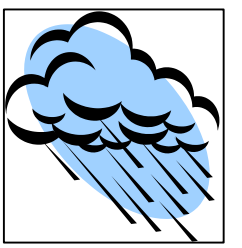

- Do not pull on the power supply cable to remove the plug from your mains supply socket.
- Do not pull out or insert the plug with wet hands.
- Do not attempt to use your appliance outdoors or any place where it is likely to come into contact with the elements.
- Before cleaning the appliance or performing maintenance work, ensure that the appliance has been disconnected from your mains supply.
- Never allow the back coils of the appliance to come into contact with the wall surface.
- Always ensure that the location where you are installing your appliance is free of stored items such as papers and other flammable materials.
- Never block the ventilation openings of the appliance, either on the inside or its exterior.

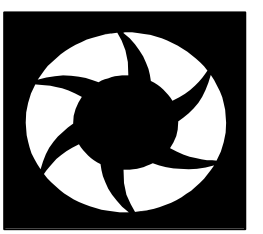

- It is vital to keep your appliance well ventilated, so that there is proper air flow between the bottom of the unit and the plinth/kick plate which it is sitting on.
- Do not place electrical devices inside of the appliance, such as mixers and electric ice cream makers.

Service

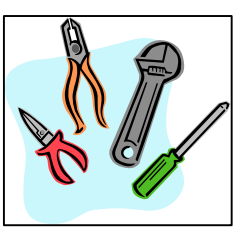

You should not attempt to repair the appliance yourself, as this could cause injury or a more serious malfunction. If you require a service call then please contact the Baumatic Service Department.

Downloaded from Fridge-Manual.com Manuals

Specifications of your freezer

Congratulations on purchasing a Baumatic freezer.

- Fast freeze switch
- Fast freeze indicator light
- Temperature rise warning light
- Adjustable thermostat
- 4 Freezer drawers
- Reversible door
- Adjustable feet

Dimensions of appliance

Height:	875 mm
Width:	540 mm
Depth:	545 mm

Dimensions of aperture*

Height:	875 mm – 880 mm
Width:	560 mm – 570 mm
Depth:	550 mm

Energy efficiency class

Energy class: A

* Please refer to the installation instructions for more specific information on the size of aperture that you will require.

IMPORTANT: When you install your appliance it is important to bear in mind its climatic rating.

In order to find out the climatic rating of your appliance, you should check the rating plate. The rating plate is located on the front left edge of the inside of the fridge section. You will need to open the door of your appliance to be able to find it.

The rating plate will indicate the ambient temperature range that your appliance will function correctly within.

Downloaded from Fridge-Manual.com Manuals

Description of the appliance

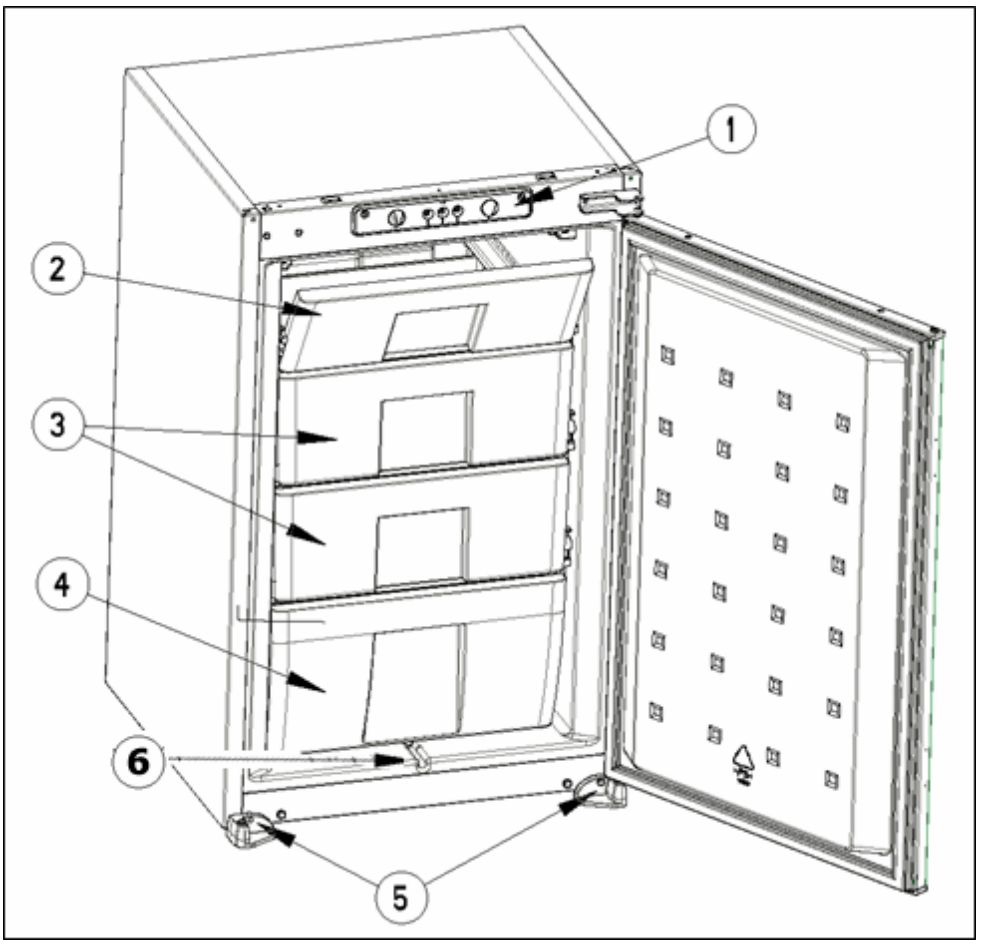

1. Control panel & thermostat control
2. Freezer flap
3. Freezer compartment drawer
4. Freezer compartment bottom drawer
5. Adjustable feet
6. Defrost drainage tube

- The top freezer compartment (**2**) should be used for freezing fresh food.
- The other drawers (**3**) and (**4**) should be used to store food that is already frozen
- The defrost drainage tube should be used during the defrost process. (Please refer to the "Defrosting your freezer" section.)

Downloaded from Fridge-Manual.com Manuals

Using your Baumatic freezer

Before switching on

- Make sure that it has been installed by a suitably qualified person, as per the information contained in Baumatic's installation instructions.

- After delivery, wait for eight hours before connecting the appliance to your mains supply. This will allow any refrigerant gasses that may have been disturbed during the transportation process, are allowed to settle.

- The outside of the appliance and the removable accessories contained within it, should be cleaned with a solution of liquid detergent and water.

- The interior of the appliance should be cleaned with a solution of sodium bicarbonate dissolved in lukewarm water. The interior and accessories should be thoroughly dried, after the cleaning process has been completed.

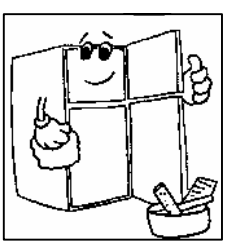

- There can be an odour when you first switch on the appliance. It will lessen as the appliance starts to cool.

During first use

- When you first switch on the appliance, the compressor will run continuously for approximately 24 hours or until the refrigerator reaches a cool enough temperature.

- During this period of time, you should try not to open the door frequently or place a large amount of food within the appliance.

- If the unit is switched off or unplugged, you must allow at least 5 minutes before restarting the appliance on the thermostat or connecting it to your mains supply.

Downloaded from Fridge-Manual.com Manuals

Turning on the appliance and setting the thermostat

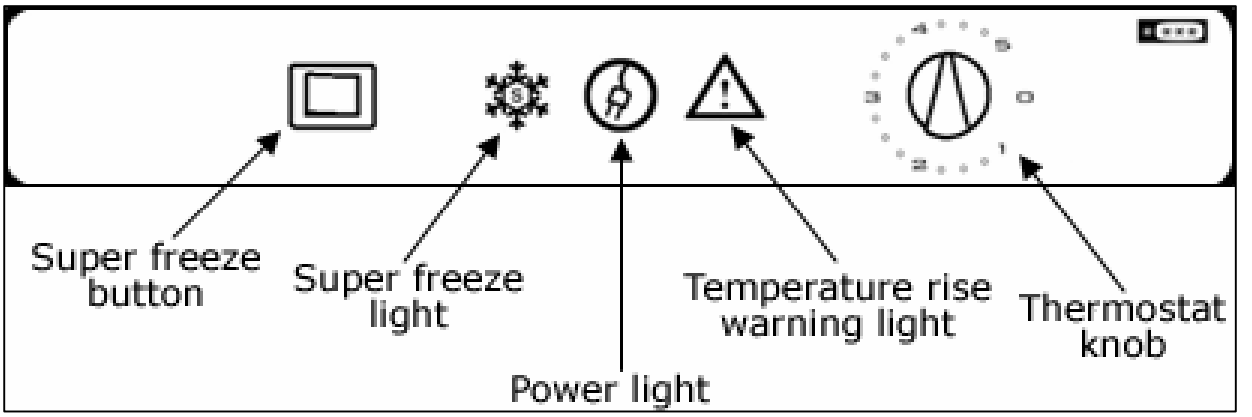

You switch on your appliance by connecting it to your mains supply and setting the thermostat. The thermostat is located on the control panel, at the top of the freezer.

- The thermostat automatically regulates the temperature inside the freezer, depending on what number you have turned the thermostat control knob to.
- Position <0> means that the appliance is switched off and will not cool.
- Position <1> will give you a higher temperature inside the freezer.
- Position <5> will give you a lower temperature inside the freezer.
- Ideally the thermostat should be set to a position between <3> to <4>.
- The freezer section can cool down to -18 degrees centigrade and lower.
- **IMPORTANT:** The ambient temperature of the room, the temperature of food and the amount of food that has been placed in the freezer and how often the door is opened, will all affect the temperature being maintained by the appliance.

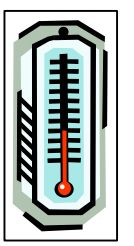

- On the maximum setting (position <5>), your freezer will work harder to maintain a lower temperature. There is no need to run your appliance on this setting for prolonged periods and you should return the thermostat knob to between <3> to <4>.

Downloaded from Fridge-Manual.com Manuals

Control panel

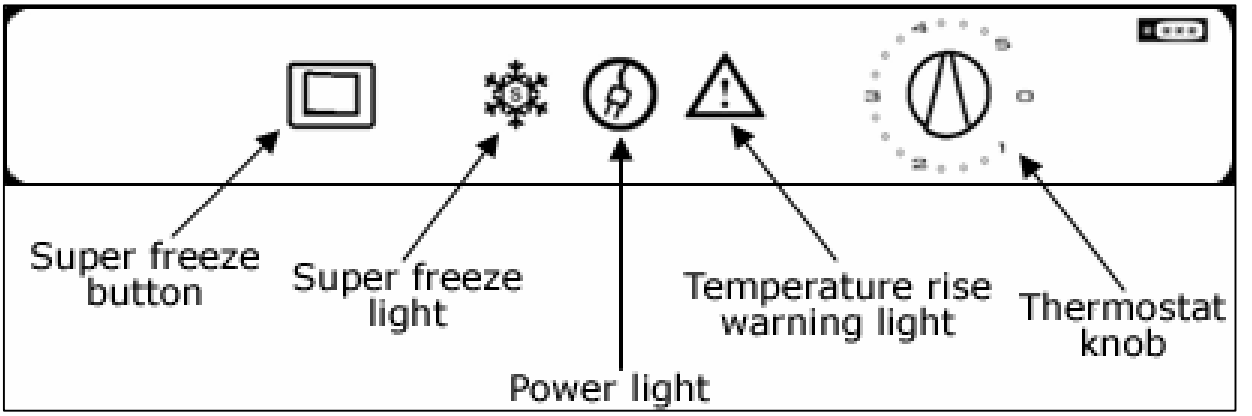

- **Super freeze light**- will light up when the super freeze button has been turned on.

- **Power light-** will light up as soon as the appliance is connected to your mains supply.

- **Temperature rise warning light**- will light up when the appliance detects a rise in temperature that could affect the contents of your freezer.

The **** freezer compartment

The freezer compartment is suitable for storing and freezing food.

- The freezer compartment temperature must have already reached -18 degrees centigrade (or lower) before you attempt to store food that is already frozen or freezing fresh food.

- The freezer compartment is only able to freeze a certain quantity of food at one time. You should not attempt to freeze more than 16 kilograms of fresh food within a 24 hour period.

- Preferably the top drawer should be used when freezing fresh food. Once the food is frozen, you can then transfer the food to the lower drawers.

- Warm food should be allowed to cool down before you attempt to freeze it. If you place warm food in the freezer compartment, then the increased humidity will cause quicker ice formation and increase the amount of power that the appliance uses.

- The guidance of the food manufacturer should be followed, in regard to the maximum storage time.

- Thawed foods must not be frozen for a second time.

Downloaded from Fridge-Manual.com Manuals

Freezing fresh food

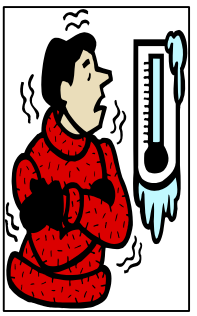

- To freeze the maximum quantity of fresh food specified above, you should turn the thermostat knob to position <5>, 24 hours prior to attempting freezing.
- For smaller quantities of fresh food, you should turn the thermostat knob to position <5>, approximately 6 hours prior to attempting freezing.

- Alternatively you can use the Super Freeze option (see the "Freezing with Super Freeze" section of this booklet).
- Fresh food should be packed into airtight containers or packaging. This will help to make sure that the food doesn't dry out or lose its flavour. It will also ensure that flavour does not transfer from other foods.

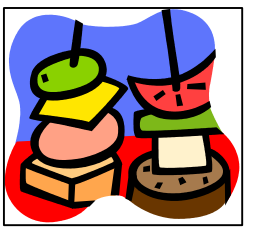

- The food should be placed on the freezer compartment's base. Do not allow fresh food to touch items that are already frozen.
- After 24 hours you should check that the fresh food is satisfactorily frozen. If it is then the thermostat should be turned down to its normal setting (between <3> and <4>).

Tips on freezing

- Freezer bags, polythene wraps, aluminium foil (extra thick) and special cans for frozen foods are suitable packaging for storing frozen goods in.
- Tape, rubber bands or plastic clips are suitable for sealing bags and wrappings.
- Before sealing a suitable bag, you should compress the air out of it, as this will help the food to freeze more easily.

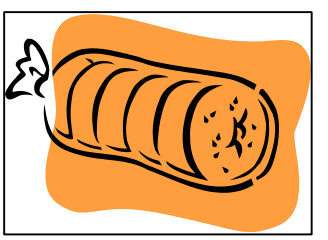

- Flat packages freeze more easily.

Downloaded from Fridge-Manual.com Manuals

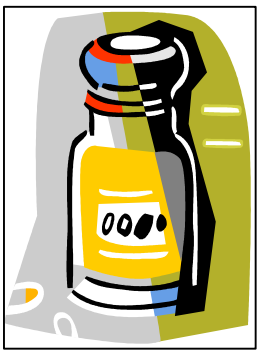

- If you are freezing liquid, then do not fill the container to the brim. Liquids will expand when being frozen.

- **Do not place bottles (glass or tin) containing liquids (especially sparkling liquids) into the freezer as they could cause the bottle to burst during freezing.**

Making ice cubes

- Fill the ice cube tray with water and place it in the freezer compartment.

- After the water is completely frozen and turned to ice, you can twist the ice cube tray (as shown in the drawing below) to dispense the ice.

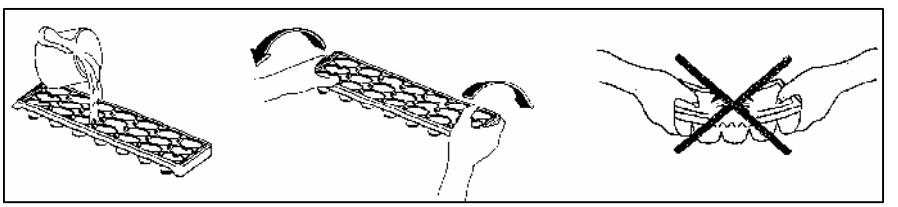

Freezing with Super Freeze

- Press the Super Freeze button and the freezer will start to run continuously at its maximum setting.

- The orange Super Freeze light will come on when the Super Freeze button has been turned on.

- There is no need to adjust the thermostat knob.

- The freezer temperature will decrease and the appliance will get to its lowest temperature.

- Place the food that is to be frozen inside the freezer, preferably in the top drawer.

- Once the food is frozen, you should turn off the Super Freeze setting. **DO NOT TURN OFF THE SUPER FREEZE BUTTON UNTIL THE FOOD IS FULLY FROZEN.**

- The orange Super Freeze light will go out and your appliance will return to normal operation. You can then move the frozen food from the top drawer, into the lower drawers.

Downloaded from Fridge-Manual.com Manuals

Cleaning and maintenance

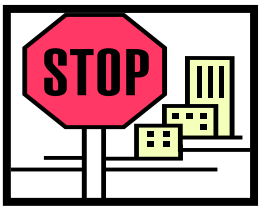

WARNING: PLEASE ENSURE THAT YOUR APPLIANCE IS DISCONNECTED FROM YOUR MAINS SUPPLY BEFORE ATTEMPTING TO CLEAN IT.

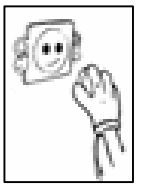

- Do not clean the appliance by pouring water onto it or spraying water over it.

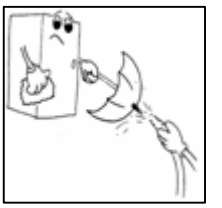

- The freezer compartment should be cleaned periodically, using a solution of bicarbonate of soda and lukewarm water.

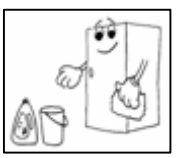

- Clean the accessories separately with soap and water. Do not clean them in a dishwasher.

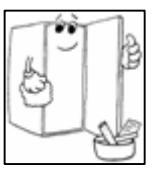

- Do not use abrasive products, detergents or soaps.

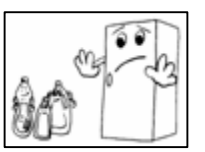

- After washing the appliance, wipe over the area that you have cleaned with a damp cloth and then dry it thoroughly.
- When cleaning is complete, dry your hands and then reconnect the plug to your mains supply.

Downloaded from Fridge-Manual.com Manuals

Defrosting the freezer compartment

The frost in the freezer compartment should be removed periodically. You can use a plastic scraper to keep down the amount of frost that builds.

IMPORTANT: The freezer compartment should be defrosted at least twice a year. The number of times that you need to defrost it, will depend on the setting of your thermostat and how much food you freeze and store in the compartment.

- The day before you defrost, turn the thermostat dial to position <5>, this will make sure that the food contained in the compartment is frozen properly.

- Whilst defrosting the appliance, the food should be removed from the compartment and wrapped in several layers of paper and stored in a cool place. The foods rise in temperature will shorten its storage life and therefore the food should be used within a relatively short period of time.

- **DO NOT PLACE FOOD BACK IN THE FREEZER COMPARTMENT THAT HAS STARTED TO THAW.**

- Set the thermostat knob to position <0> and disconnect the appliance from your mains supply.

- Leave the door to the freezer compartment open. You can place a bowl of warm water inside the freezer compartment to speed up the defrost process.

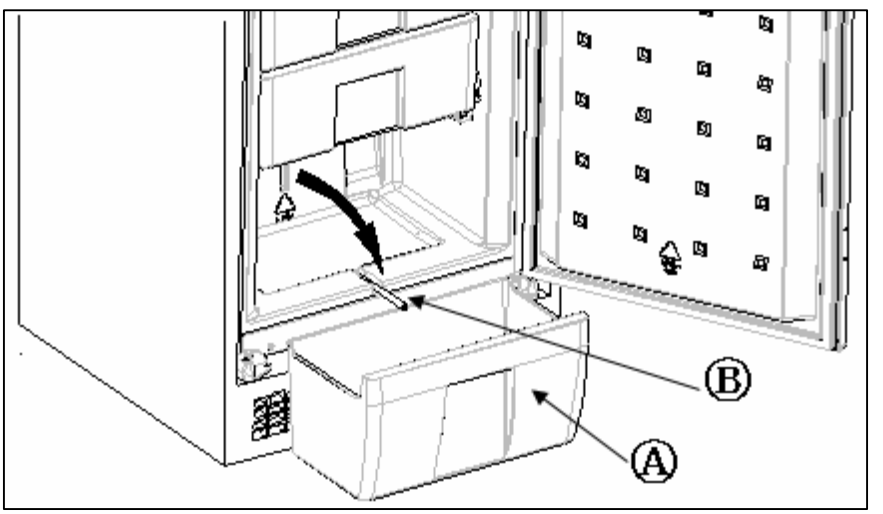

- Your appliance is fitted with a defrost drainage tube. Therefore you should pull out the bottom drawer (**A**) and place it on the floor in front of the appliance.

Downloaded from Fridge-Manual.com Manuals

- The defrost drainage tube (**B**) is located on the back wall of the freezer. It should be placed in the groove at the front of the freezer.

- You should check to make sure that the defrost water coming out of the defrost drainage tube, will flow into the bottom drawer that you have placed in front of the appliance.

- Take care to ensure that the bottom drawer does not overflow, the defrost water may need emptying periodically.

- Once all the ice that has built up has melted, then the inside of the freezer compartment should be dried thoroughly. Failure to do this will result in immediate ice build when the appliance is turned back on.

- With dry hands, reconnect your appliance to your mains supply. Set the thermostat knob to position <5> for a 24 hour period, before returning it to the normal setting of between <3> and <4>.

- You should not attempt to freeze fresh food inside the freezer compartment until this 24 hour time period has elapsed.

- **Do not defrost the appliance with other electrical devices (e.g. hair dryer). Do not use sharp metal objects to remove the ice on the freezer, as this could cause damage to the refrigerant system.**

Downloaded from Fridge-Manual.com Manuals

Installation

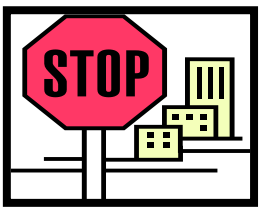

IMPORTANT: Before installation and usage, read all the instructions and make sure that the voltage (V) and the frequency (Hz) indicated on the rating plate are exactly the same as the voltage and frequency in your home. The rating plate can be found on the front left edge of the inside of the refrigerator.

The manufacturer declines all responsibility in the event of the installer failing to observe all the accident prevention regulations in force, which are necessary for normal use and the regular operation of the electric system.

Electrical connection

YOUR REFRIGERATOR IS INTENDED FOR FITTED AND PERMANENT INSTALLATION.
We recommend that the appliance is connected by a qualified electrician, who is a member of the N.I.C.E.I.C. and who will comply with the I.E.E. and local regulations.

- Your refrigerator comes supplied with a 13 amp plug fitted. If in future you need to change the fuse in this plug, then a 13 amp ASTA approved (BS 1362) fuse **must** be used.

- The wiring in the mains lead is coloured as follows:

Brown	Live
Blue	Neutral
Green and yellow	Earth

- As the colours of the wires in the appliance's mains lead may not correspond with the coloured markings identifying the terminals in your spur box, please proceed as follows:

  The **brown wire** must be connected to the terminal marked "L" (live), or coloured **red**.

  The **blue wire** must be connected to the terminal marked "N" (neutral), or coloured **black**.

  The **green and yellow wire** must be connected to the terminal marked "E" (earth), or by the earth symbol, or coloured **green and yellow**.

- When the connection is completed, no stray strands or cut wire should be present. The cord clamp must be secured over the outer sheath.

Downloaded from Fridge-Manual.com Manuals

Positioning

- It is advisable that your appliance is only installed in a location where the ambient temperature of the room, corresponds with the climate classification that is stated on the rating plate of your appliance. Your appliance may not function correctly if the ambient temperature falls outside of the following ranges.

Climate classification	Appropriate ambient temperature
SN	+10 to +32 degrees centigrade
N	+16 to +32 degrees centigrade

- Your appliance should not be located in direct sunlight or exposed to continuous heat or extremes of temperature (e.g. next to a radiator or boiler).

- The door should be able to open completely and freely

- The appliance should be situated so you can easily access the food that is stored in it.

- You should check whether there is an electrical socket available, which will be accessible after your appliance is installed.

Ventilation requirements

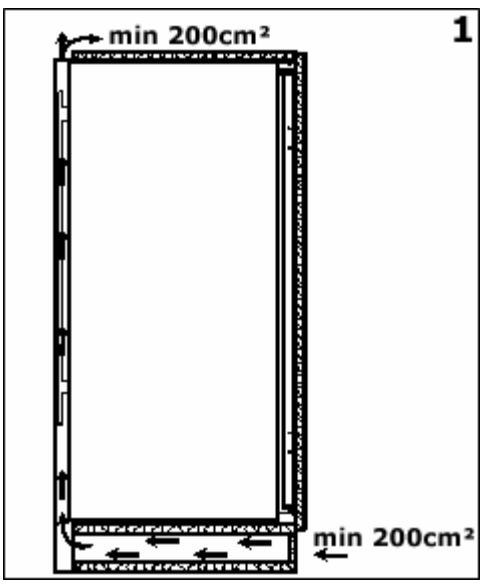

1) Your appliance requires ventilation. The minimum amount of ventilation that it requires is shown in figure 1.

Downloaded from Fridge-Manual.com Manuals

Aperture and appliance dimensions

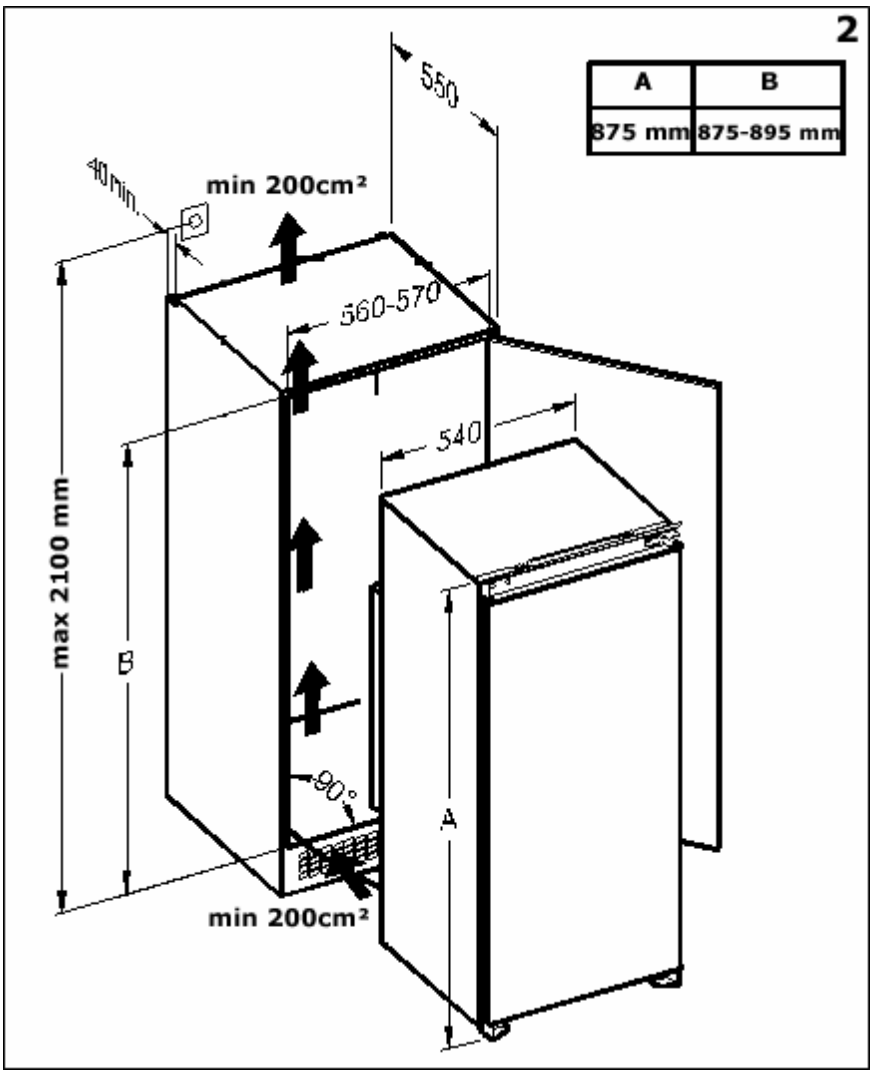

2) Figure 2 shows the aperture size that you will need to be able to install your appliance.

- The appliance must be stood on a level floor. You can use the leveling feet to take into account any minor unevenness in the floor.

Supplied installation components

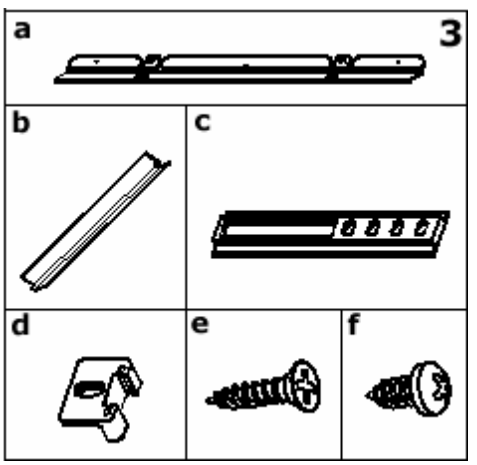

a) Top fixing bar
b) Sealing strip
c) Door slider
d) Door guide
e) Fixing screws (Ø4 x 17)
f) Fixing screws (Ø4.2 x 9.5)

Downloaded from Fridge-Manual.com Manuals

Installing your freezer

If you need the appliance door to open from the other side, then please reverse the door before commencing the installation process. (See Reversing the door section).

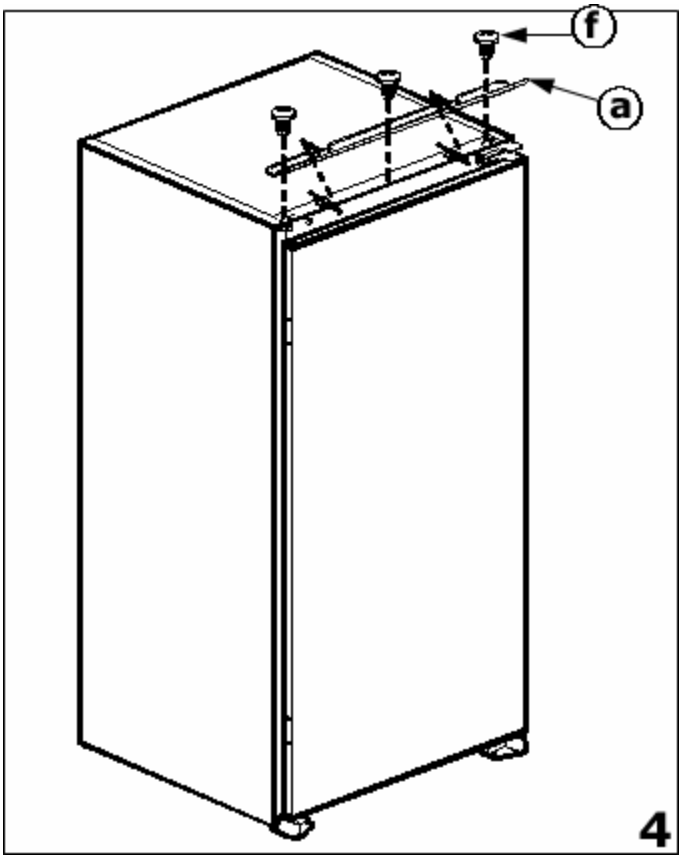

4) Insert the top fixing bar (**a**) into the slot on the top of the appliance. Use the Ø4.2 x 9.5 fixing screws (**f**) to fit the fixing bar to the top of the appliance.

- Pass the power cable through to the back of the aperture. This will allow the appliance to be easily plugged in, once you have completed the rest of the installation.

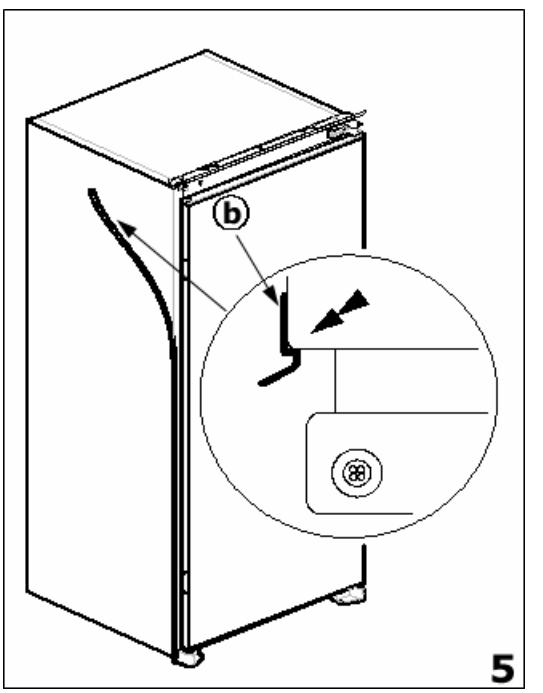

5) Cut the sealing strip so that is the same height as the height of the aperture.

- Stick the sealing strip onto the side of the aperture that the appliance door will open from.
- Carefully lift the appliance and place it into the aperture of the kitchen unit that you are installing it into.
- Slide the appliance over to the far left of the aperture, unless you have reversed the door. In which case you should slide the appliance over to the far right of the aperture.

Downloaded from Fridge-Manual.com Manuals

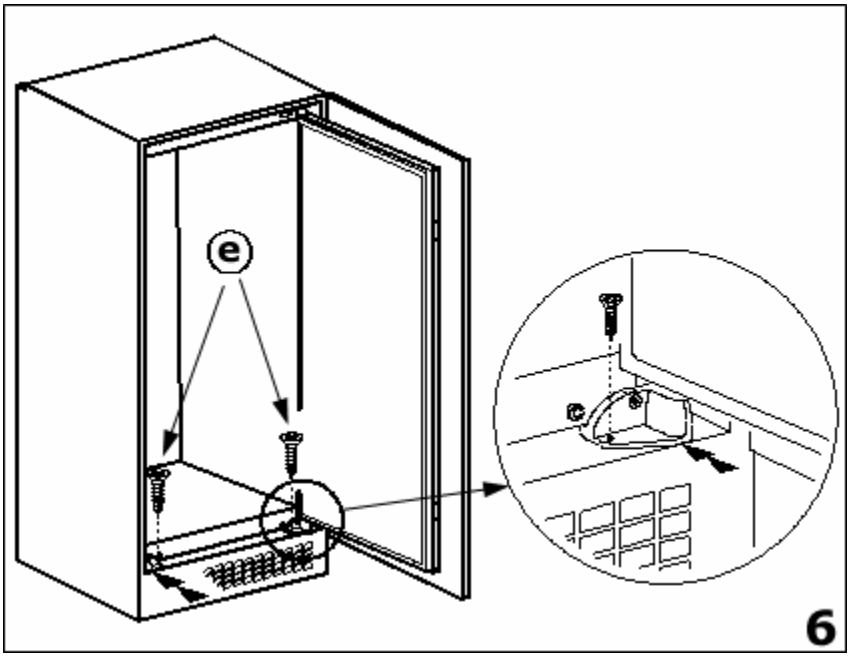

6) Align the front feet of the appliance, with the front edge of the kitchen unit.

Fix the front feet into position using the Ø4 x 17 fixing screws (**e**).

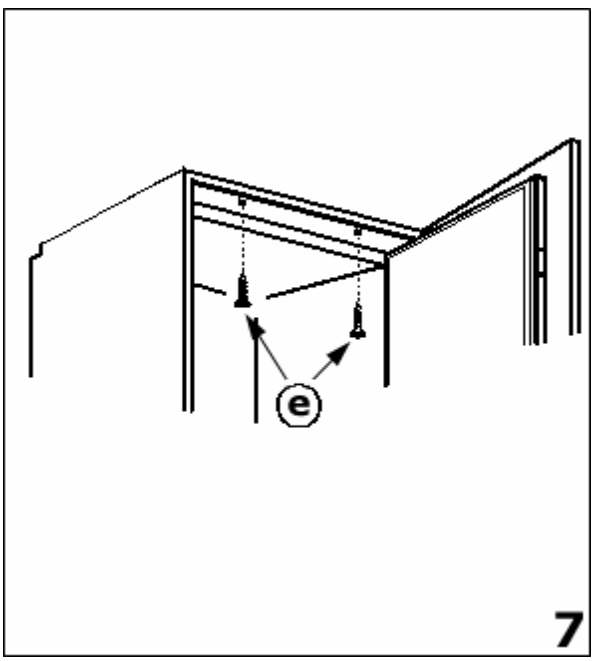

7) Screw the top fixing bar to the underneath of the kitchen unit using the Ø4 x 17 fixing screws (**e**).

Downloaded from Fridge-Manual.com Manuals

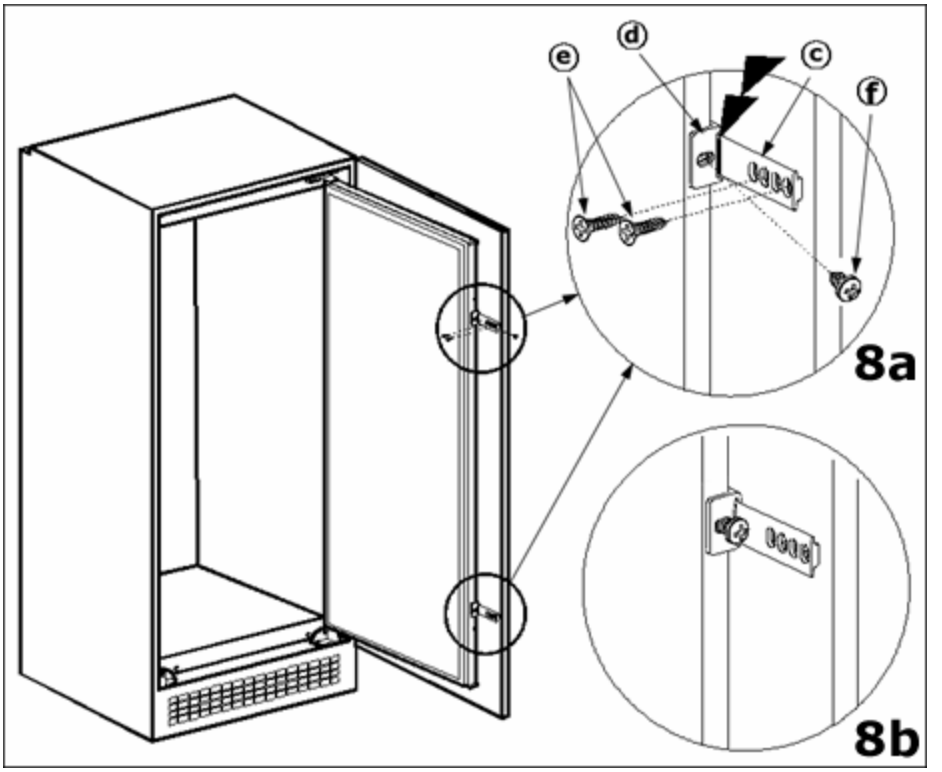

8a) Fit the door guides (**d**) to the appliance door but do not secure them at this stage.

- Open the furniture door and the appliance door to their fullest positions. Both of the doors should still be in contact with each other.

- Using a pencil, mark where the edge of the appliance door meets with the furniture door.

- From the edge of the furniture door, using a pencil you should mark a distance, which is the thickness of the cabinet wall + 10 mm. This is where the edge of the door slide (**c**) should be placed, in line with the door guide (**d**).

- Fix the door slide (**c**) to the furniture door using the Ø4 x 17 fixing screws (**e**). The outer edge of the door slide should be placed on the second pencil mark that you made and in line with the door guide.

8b) Insert the door guides (**d**) into the door slides (**c**) and using the Ø4.2 x 9.5 fixing screws (**f**), secure the door guides (**d**) to the appliance door, through the predrilled hole.

- Close the furniture door and appliance door until they are almost fully shut. In this position the door guide (**d**) should not come past the outer edge of the door slide (**c**). If it does, then your door slide is too close to the edge of your furniture door and should be moved further in.

Downloaded from Fridge-Manual.com Manuals

Reversing the door of your appliance

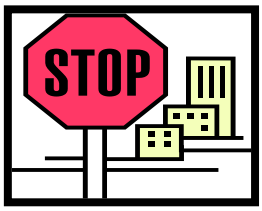

Caution! After unscrewing any of the fixing hinges, hold the door to prevent it from falling and causing damage.

Any parts that you remove from the appliance whilst reversing the door, should be retained for later use.

- **WHILST SUPPORTING THE DOOR**. Unscrew the upper hinge screws.

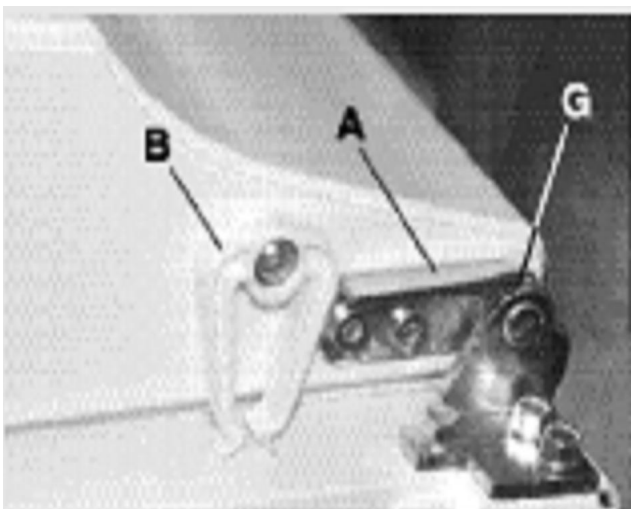

- On the bottom side of the door unscrew the swing stopper screws and remove the stopper (A). Fix the attached stopper with its bearing on the opposite side of the door.
- Unscrew the forced door closure system (B) and fix it to the opposite side of the door (certain models only).
- Remove the door from the bottom hinge.
- Unscrew the leg holder fixing screws.
- Tilt the appliance backward at a maximum angle of 35° Unscrew the leg support screws (C) - left and right, and remove the leg support cover (D). Then place it on the opposite side. Unscrew, remove and then replace the position of the end switch (E) and decorative peg (F) (for models with forced door closing system).

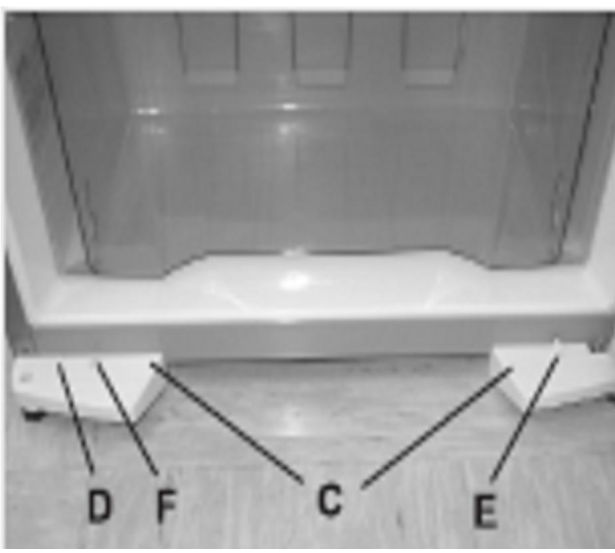

- Unscrew the three screws fixing the bottom hinge and then fix the bottom hinge on the opposite side.
- To fit the door on the opposite side of the freezer proceed with the above procedure in reverse.

Downloaded from Fridge-Manual.com Manuals

Troubleshooting

IMPORTANT: If your freezer appears not to be operating properly, before contacting the Baumatic Service Department, please refer to the checklist below.

My freezer does not appear to be working/there is no power to my appliance.

- Check that the plug is fully inserted into the power socket.
- Check that there is power to your mains supply (e.g. that there hasn't been a power cut or that the fuse hasn't blown).
- Check that the thermostat inside the appliance has not been turned to the off position.
- Check that your mains supply voltage, corresponds to the voltage stated on the rating plate of your appliance.

My freezer appears to be performing poorly

- Check that the appliance isn't overloaded and that food hasn't been packed too tightly into it.
- The thermostat setting is too low, you should turn the thermostat up higher.
- Ensure that the door is closing properly and that the door has not been opened for a prolonged period in error.
- Ensure that there is adequate ventilation for your appliance.

My freezer is noisy

- The refrigerant gas that circulates the pipework in the appliance may make a slight noise, even if the compressor is not running.
- If the noise worsens or the appliance gets louder than normal; check that it is leveled off correctly, that nothing is touching the rear of the fridge and that nothing placed inside the appliance is rattling.

Ice has quickly formed on the inner back wall of my freezer

- Check that food has not been pushed too far back inside the appliance, so that it is in contact with the inner back wall.

Downloaded from Fridge-Manual.com Manuals

Baumatic Ltd. Conditions of Guarantee

Dear Customer,

Your new Baumatic appliance comes complete with a free 12 month guarantee covering both parts and labour costs resulting from defective materials or workmanship.

Baumatic also gives you the opportunity to automatically extend the guarantee period for a further 12 months at no extra cost, giving an initial guarantee period of 24 months. The extended guarantee period applies to England, Scotland, Wales and Northern Ireland only.

To qualify for your full 24 months guarantee you **must** register your appliance within 28 days of purchase to be covered under this guarantee. This can be done online via: www.baumatic.co.uk or through returning the guarantee card which can be found in each new Baumatic appliance.

* In addition, your appliance is covered by a 5 year parts warranty. Baumatic Ltd will provide free of charge the parts required to repair the appliance, only if they are fitted by a Baumatic engineer, for any defect that arises due to faulty materials or workmanship within a period of 5 years from the original purchase date.
* An additional 1 to 3 year insurance scheme for labour is available should you wish to extend the warranty period.

Should any person other than an authorised representative of Baumatic Ltd interfere with the appliance, the policy is negated and Baumatic Ltd will be under no further liability.

The guarantee covers the appliance for normal domestic use only, unless otherwise stated.

Any claims made under the terms of the guarantee must be supported by the original invoice/bill of sale issued at the time of purchase.

This guarantee is transferable only with the written consent of Baumatic Ltd.

If the appliance fails and is considered either not repairable or uneconomical to repair during the manufacturer warranty period, a free of charge replacement will not be offered.

The guarantee for any replacement will only be for the remainder of the guarantee on the original product purchased.

The guarantee does not cover:

- Sinks and taps
- Failure to comply with the manufacturers instructions for use.
- The replacement of cosmetic components of accessories
- Accidental damage or wilful abuse.
- Subsequent loss or damage owing to the failure of the appliance or electrical supply
- Incorrect installation
- Losses caused by Acts of God, civil war, failure to obtain spare parts, strikes or lockouts
- Filters, fuses, light bulbs, external hoses, damage to bodywork, paintwork, plastic items, covers, baskets, trays, shelves, burner bases, burner caps, decals, corrosion, rubber seals.

In the course of the work carried out it may be necessary to remove the appliance from it operating position. Whilst all reasonable care will be taken, Baumatic Ltd cannot accept responsibility for damage sustained to any property whatsoever in this process.

This guarantee is in addition to and does not diminish your statutory or legal rights.

Contacting Baumatic Ltd

Sales	Service	Spares	Technical/Advice
TEL: 0118 933 6900	TEL: 0118 933 6911	TEL: 0118 933 6922	0118 933 6933
FAX: 0118 931 0035	FAX: 0118 986 9124	FAX: 0118 933 6942	0118 933 6942

For ROI (Republic of Ireland), please contact one of the numbers below:
TEL: 01 – 6266798 FAX: 01 - 6266634

Thanks you for buying Baumatic.

* Applies to UK, Scotland, Wales & Northern Ireland only (Republic of Ireland has 1 year labour & 1 year parts warranty only)

Downloaded from Fridge-Manual.com Manuals

Baumatic Ltd

You will be mine

Headquarters

Baumatic Ltd.
Baumatic Buildings,
6 Bennet Road,
Reading,
Berkshire
RG2 0QX, United Kingdom

Sales Telephone
+44 118 933 6900

Sales Fax
+44 118 931 0035

Service Telephone
+44 118 933 6911

Service Fax
+44 118 986 9124

Spares Telephone
+44 118 933 6922

Technical / Advice Telephone
+44 118 933 6933

E-mail:

sales@baumatic.co.uk

technical@baumatic.co.uk

Http (Internet site):
www.baumatic.com

Downloaded from Fridge-Manual.com Manuals

Baumatic

www.baumatic.com

Downloaded from Fridge-Manual.com Manuals